

**Gaggenau**

en Information for Use

**CI 272**

**CI 262**

Induction hob

# Table of contents

1	Safety .....	2
2	Avoiding material damage.....	4
3	Environmental protection and saving energy .....	5
4	Suitable cookware.....	5
5	Familiarising yourself with your appliance .....	7
6	Control element TwistPad .....	8
7	Before using for the first time .....	8
8	Basic operation .....	8
9	Flex Zone .....	10
10	FlexPlus Zone.....	11
11	Time-setting options.....	11
12	Booster for pots .....	12
13	Booster for pans .....	12
14	Keep-warm function.....	13
15	Transfer settings.....	13
16	Professional cooking function.....	13
17	Frying Sensor.....	14
18	Childproof lock.....	16
19	Wipe protection.....	16
20	Individual safety switch-off .....	16
21	Basic settings.....	16
22	Cookware test .....	17
23	Power limitation .....	18
24	Home Connect .....	18
25	Hob-based hood control.....	20
26	Cleaning and servicing.....	21
27	FAQs .....	22
28	Troubleshooting.....	23
29	Disposal.....	24
30	Declaration of Conformity .....	25
31	Customer Service.....	25



## 1 Safety

Observe the following safety instructions.

### 1.1 General information

- Read this instruction manual carefully.

- Keep the instructions, the appliance pass and the product information safe for future reference or for the next owner.
- Do not connect the appliance if it has been damaged in transit.

### 1.2 Intended use

Only a licensed professional may connect appliances without plugs. Damage caused by incorrect connection is not covered under the warranty.

The appliance can only be used safely if it is correctly installed according to the safety instructions. The installer is responsible for ensuring that the appliance works perfectly at its installation location.

Only use this appliance:

- To prepare meals and drinks.
- Under supervision. Never leave the appliance unattended when cooking for short periods.
- In private households and in enclosed spaces in a domestic environment.
- Up to an altitude of max. 4000 m above sea level.

Do not use the appliance:

- With an external timer or a separate remote control. This does not apply if operation with appliances included in EN 50615 is switched off.

If you wear an active implantable medical device (e.g. a pacemaker or defibrillator), check with your doctor that it complies with Council Directive 90/385/EEC of 20th June 1990, EN 45502-2-1 and EN 45502-2-2, and that it has been chosen, implanted and programmed in accordance with VDE-AR-E 2750-10. If these conditions are satisfied, and if, in addition, non-metal cooking utensils and cookware with non-metal handles are used, it is safe to use this induction hob as intended. If these conditions are satisfied, and if, in addition, non-metal cooking utensils and cookware with non-metal handles are used, it is safe to use this induction hob as intended.

### 1.3 Restriction on user group

This appliance may be used by children aged 8 or over and by people who have reduced physical, sensory or mental abilities or inadequate experience and/or knowledge, provided that they are supervised or have

been instructed on how to use the appliance safely and have understood the resulting dangers.

Do not let children play with the appliance. Children must not perform cleaning or user maintenance unless they are at least 15 years old and are being supervised.

Keep children under the age of 8 years away from the appliance and power cable.

## 1.4 Safe use

### **⚠ WARNING – Risk of fire!**

Leaving fat or oil cooking on an unattended hob can be dangerous and may lead to fires.

- ▶ Never leave hot oil or fat unattended.
- ▶ Never attempt to extinguish a fire using water; instead, switch off the appliance and then cover with a lid or a fire blanket.

The cooking surface becomes very hot.

- ▶ Never place flammable objects on the cooking surface or in its immediate vicinity.
- ▶ Never place objects on the cooking surface.

The appliance will become hot.

- ▶ Do not keep combustible objects or aerosol cans in drawers directly underneath the hob.

Hob covers can cause accidents, for example due to overheating, catching fire or materials shattering.

- ▶ Do not use hob covers.

After every use, switch off the hob using the main switch.

- ▶ Do not wait until the hob turns off automatically as there are no longer any pots and pans on it.

Food may catch fire.

- ▶ The cooking process must be monitored. A short process must be monitored continuously.

### **⚠ WARNING – Risk of burns!**

The appliance and its parts that can be touched become hot during use, particularly the hob surround, if fitted.

- ▶ Caution should be exercised here in order to avoid touching heating elements.
- ▶ Young children under 8 years of age must be kept away from the appliance.

Hob protective grilles may cause accidents.

- ▶ Never use hob protective grilles.

The appliance becomes hot during operation.

- ▶ Allow the appliance to cool down before cleaning.

Metal objects on the hob quickly become very hot.

- ▶ Never place metal objects (such as knives, forks, spoons and lids) on the hob.

### **⚠ WARNING – Risk of electric shock!**

Incorrect repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced with a special connection cable, which is available from the manufacturer or his Customer Service.

If the appliance or the power cord is damaged, this is dangerous.

- ▶ Never operate a damaged appliance.
- ▶ If the surface is cracked, you must switch off the appliance in order to prevent a possible electrical shock. To do this, switch off the appliance via the fuse in the fuse box rather than at the main switch.
- ▶ Never pull on the power cord to unplug the appliance. Always unplug the appliance at the mains.
- ▶ If the appliance or the power cable is damaged, immediately switch off the fuse in the fuse box.

- ▶ Call customer services. → *Page 25*

An ingress of moisture can cause an electric shock.

- ▶ Do not use steam- or high-pressure cleaners to clean the appliance.

The insulation on cables of electrical appliances may melt if it touches hot parts of the appliance.

- ▶ Never bring electrical appliance cables into contact with hot parts of the appliance.

If metallic objects come into contact with the fan that is located on the underside of the hob, this may cause an electric shock.

- ▶ Do not store long, pointed metallic objects in the drawers below the hob.

### **⚠ WARNING – Risk of injury!**

Saucepans may suddenly jump due to liquid between the saucepan base and the hotplate.

- ▶ Always keep hotplates and saucepan bases dry.
- ▶ Never use icy-cold cookware that has been in the freezer.

When cooking in a bain marie, the hob and cooking container could shatter due to overheating.

- ▶ The cooking container in the bain marie must not directly touch the bottom of the water-filled pot.
- ▶ Only use heat-resistant cookware.

An appliance with a cracked or broken surface can cause cuts.

- ▶ Do not use the appliance if it has a cracked or broken surface.

### **⚠ WARNING – Danger: Magnetism!**

The removable control element is magnetic and may affect electronic implants, e.g. heart pacemakers or insulin pumps.

- ▶ Persons with electronic implants must stand at least 10 cm away from the magnetic control element. Never put the control element in your pockets.

### **⚠ WARNING – Risk of suffocation!**

Children may put packaging material over their heads or wrap themselves up in it and suffocate.

- ▶ Keep packaging material away from children.
- ▶ Do not let children play with packaging material.

Children may breathe in or swallow small parts, causing them to suffocate.

- ▶ Keep small parts away from children.
- ▶ Do not let children play with small parts.

## **2 Avoiding material damage**

This is where you can find the most common causes of damage and tips on how to avoid them.

<b>Damage</b>	<b>Cause</b>	<b>Action</b>
Stains	Unsupervised cooking process.	Monitor the cooking process.
Stains, blisters	Spilled food, especially food with a high sugar content.	Remove immediately with a glass scraper.
Stains, blisters or fractures in the glass	Defective cookware, cookware with melted enamel or cookware with copper or aluminium base.	Use suitable cookware that is in a good condition.
Stains, discolouration	Unsuitable cleaning methods.	Only use cleaning agents that are suitable for glass ceramic, and only clean the hob when it is cold.
Blisters or fractures in the glass	Knocks or falling cookware, cooking accessories or other hard or pointed objects.	When cooking, do not hit the glass or let objects fall onto the hob.
Scratches, discolouration	Rough cookware bases or moving the cookware on the hob.	Check the cookware. Lift the cookware when moving it.
Scratches	Salt, sugar or sand.	Do not use the hob as a work surface or storage space.
Scratches	Material residue between the hob and the rotary knob.	Keep the rotary knob contact area clean.
Damage to the appliance	Cooking with frozen cookware.	Never use frozen cookware.
Damage to the cookware or the appliance	Cooking without contents.	Never place or heat empty cookware on a hot cooking zone.
Glass damage	Melted material on the hot cooking zone or hot pot lid on the glass.	Do not place greaseproof paper or aluminium foil nor plastic containers or pot lids on the hob.
Overheating	Hot cookware on the control panel or on the frame.	Never place hot cookware on these areas.

**ATTENTION!**

A fan is located on the underside of this hob.

- ▶ If a drawer is located on the underside of the hob, do not store any small or pointed objects, paper or tea towels in it. These objects may be sucked in and damage the fan or impair the cooling.
- ▶ There must be a clearance of at least 2 cm between the contents of the drawer and the fan entry point.

## 3 Environmental protection and saving energy

### 3.1 Disposing of packaging

The packaging materials are environmentally compatible and can be recycled.

- ▶ Sort the individual components by type and dispose of them separately.

### 3.2 Saving energy

If you follow these instructions, your appliance will use less energy.

Select the cooking zone to match the size of your pan. Centre the cookware on the hob.

Use cookware whose base diameter is the same diameter as the hotplate.

**Tip:** Cookware manufacturers often give the upper diameter of the saucepan. It is often larger than the base diameter.

- Unsuitable cookware or incompletely covered cooking zones consume a lot of energy.

Cover saucepans with suitable lids.

- Cooking without a lid consumes considerably more energy.

Lift lids as infrequently as possible.

- When you lift the lid, a lot of energy escapes.

Use a glass lid.

- You can see into the pan through a glass lid without having to lift it.

Use pots and pans with flat bases.

- Uneven bases increase energy consumption.

Use cookware that is suitable for the quantity of food.

- Large items of cookware containing little food need more energy to heat up.

Cook with only a little water.

- The more water that is contained in the cookware, the more energy is required to heat it up.

Turn down to a lower power level early on.

- If you use an ongoing power level that is too high, you will waste energy.

Product Information according (EU) 66/2014 can be found on the attached appliance pass and online on the product page for your appliance.

## 4 Suitable cookware

Cookware that is suitable for induction cooking must have a ferromagnetic base, i.e. it must be attracted by a magnet. The base must also match the size of the


cooking zone. If cookware is not detected on a cooking zone, place this on the cooking zone with the next smallest diameter.

 
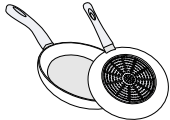
### 4.1 Size and characteristics of the cookware

To correctly detect the cookware, take the size and the material of the cookware into consideration. All cookware bases must be perfectly flat and smooth.

You can use Cookware test to check whether your cookware is suitable. You can find more information about this under

→ "Cookware test", Page 17.

Cookware	Materials	Properties
Recommended cookware	Stainless steel cookware in a sandwich design that distributes the heat well.	This cookware distributes the heat evenly, heats up quickly, and ensures that it can be detected easily.
	Ferromagnetic cookware made of enamelled steel, cast iron or special induction cookware made of stainless steel.	This cookware heats up quickly and ensures that it can be detected easily.

	Suitable	The base is not fully ferromagnetic.	If the ferromagnetic area is smaller than the base of the cookware, only the area that is ferromagnetic heats up. As a result, the heat is not distributed evenly.
		Cookware bases with aluminium content.	These reduce the ferromagnetic area, which means that less power is emitted to the cookware. This cookware may not be sufficiently detected or may not be detected at all, and therefore does not heat sufficiently.
	Not suitable	Cookware made from normal thin steel, glass, clay, copper or aluminium.	

Notes

- Do not use adapter plates between the hob and the cookware.
- Do not heat up empty cookware and do not use cookware with a thin base, as this may become very hot.

## 5 Familiarising yourself with your appliance

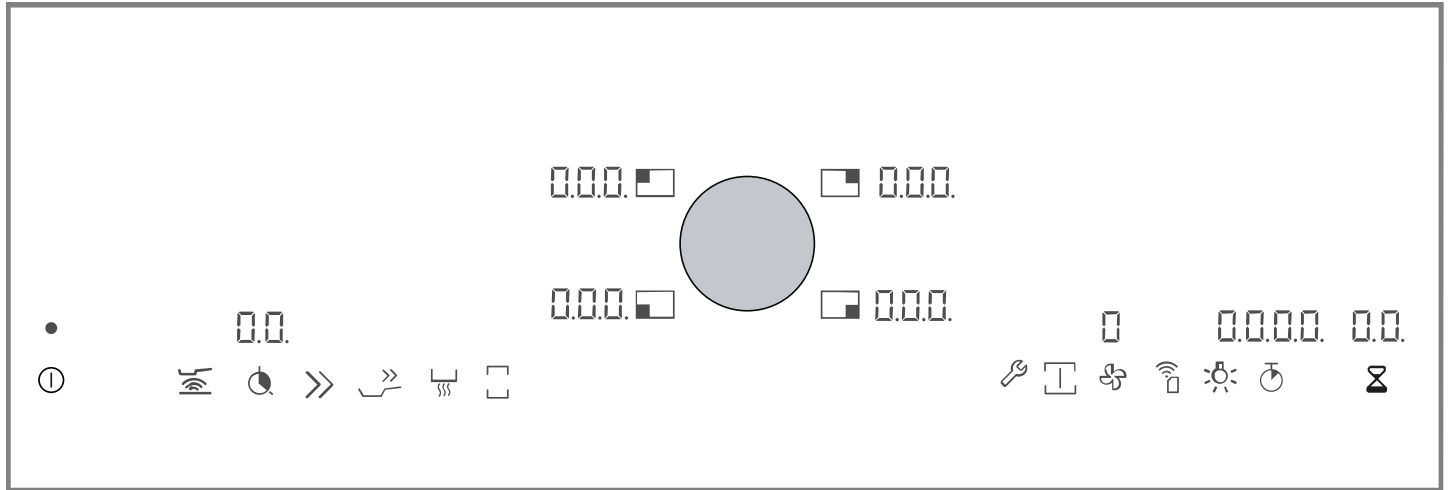
### 5.1 Cooking with induction

In comparison to conventional hobs, induction technology brings with it a series of changes and has a number of benefits such as time savings when cooking and

frying, energy savings as well as greater ease of cleaning and care. It also offers improved heat control as the heat is generated directly in the cookware.

### 5.2 Control panel

Individual details, such as colour and shape, may differ from the figure.



#### Tips

- Always keep the control panel clean and dry.
- Do not place any cookware near the displays or buttons. The electronics may overheat.

#### Selection sensors

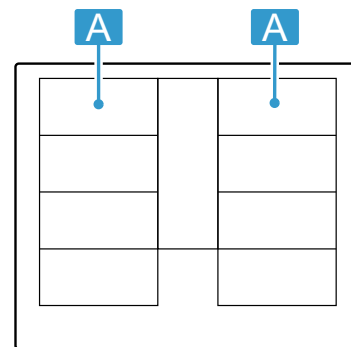
When you switch on the hob, the symbols for the controls available at this time light up white. When a function is switched on, its display lights up orange.

Sensor	Function
①	Main switch
	Frying Sensor
	Switch-off timer
	Booster for pots
	Booster for pans
	Keep-warm function
	Flex Zone
	Basic settings
	Professional mode
	Hob-based hood control
	Connectivity
	Hood light
	Runtime
	Timer

Depending on the status of the hob, the displays for the cooking zones and the various activated and available functions also light up.

### 5.3 Distribution of the cooking zones




The specified power has been measured with the standard pots, which are described in IEC/EN 60335-2-6. The power may vary depending on the size of the cookware or cookware material.



Area	Highest power level	
A	Power level 9	2200 W
	Booster for pots	3700 W
A	Power level 9	3300 W
	Booster for pots	3700 W
A	Power level 9	2600 W
	Booster for pots	3700 W
A	Power level 9	3300 W
	Booster for pots	3700 W


 
## 5.4 Cooking zone

Before you start cooking, check whether the size of the cookware fits the cooking zone that you want to use for cooking:

Area	Cooking zone type
	Single-circuit cooking zone
	Flex Zone → "Flex Zone", Page 10
	Extended FlexZone → "FlexPlus Zone", Page 11

## 5.5 Residual heat indicator

The hob has a residual heat indicator for each cooking zone. Do not touch the cooking zone if the residual heat indicator is lit.

Display	Meaning
	The cooking zone is hot.
	The cooking zone is warm.

# 6 Control element TwistPad

The rotary knob used to select the cooking zones and power levels can be removed. Since the rotary knob is magnetic, it automatically centres itself in its special programming zone.

## 6.1 Positioning and operating TwistPad

Position the rotary knob so that it is centred on the programming zone in relation to the displays that limit this zone.

To switch on a cooking zone, push the rotary knob at the level of the required cooking zone. Turn the rotary knob to select the power level.

**Note:** The rotary knob still functions correctly even if the knob is not precisely centred.  
Always keep the rotary knob clean. Soiling may impair the function.

## 6.2 Instructions for use

- A strong magnet is located inside the rotary knob. Keep the rotary knob away from magnetic data carriers such as credit cards and cards with magnetic strips. It may damage them. The magnet may also cause faults on televisions and screens.
- The rotary knob is magnetic. Metal particles stuck to the bottom may scratch the surface of the hob. Always clean the twist knob thoroughly.

## 6.3 Removing TwistPad

You can remove the rotary knob from the cooking zone during the cooking process.

If you remove the rotary knob, the Wipe protection function is switched on for 10 minutes. If you do not reset the rotary knob to its position before this time elapses, the hob switches off.

### **WARNING – Risk of fire!**


The hob may continue to heat up. If, during this 10 seconds, a metallic object is placed in the area of the TwistPad, the cooking zone may continue to heat up.


- ▶ Always switch off the hob at the main switch.

# 7 Before using for the first time

Observe the following recommendations.

## 7.1 Setting Home Connect

When you first switch on the appliance, you are prompted to set up your home network. The  symbol lights up for a few seconds on the display panel.


To begin setting up the connection, touch the  sensor and proceed in accordance with the information given in the section entitled

→ "Home Connect", Page 18. To exit initial set-up, touch any sensor.

# 8 Basic operation

## 8.1 Switching on the hob

- ▶ Touch .


The symbols for the cooking zones and the currently available functions light up.  lights up next to the cooking zones. Set the rotary knob on the settings range.

- ✓ The hob is ready for use.

### Reactivate

- ▶ If you switch the appliance on within four seconds of switching it off, the hob operates with the settings that were previously set.


## 8.2 Switching the hob off

- ▶ Touch  until the displays go out.
- ✓ All cooking zones are switched off.

**Note:** If all of the cooking zones are switched off for longer than 20 seconds, the hob is automatically switched off.

## 8.3 Setting the power level in the cooking zones


The cooking zone has 17 power levels, which are displayed from 1 to 9 with intermediate values. Select the best power level for the food and the planned cooking process.

1. Select the cooking zone. To do this, touch the rotary knob at the level for the required hob.
- ✓  lights up brighter.

## 8.4 Cooking tips

- When heating up puree, cream soups or thick sauces, stir occasionally.
- To preheat, set the power level 8-9.
- When cooking with the lid on, reduce the power level as soon as you see steam escaping. The cooking result is not affected by the steam escaping.
- After cooking, place a lid on the cookware until you serve the dish.
- To cook with the pressure cooker, observe the manufacturer's instructions.
- Do not cook food for too long, otherwise nutrients will be lost. The kitchen timer enables you to set the optimal cooking time.
- Ensure that the oil does not smoke.
- To brown the food, fry it in small portions, one after the other.
- Some items of cookware may reach high temperatures while the food is cooking. You should therefore use oven gloves.
- You can find recommendations for energy-efficient cooking under  
→ "Saving energy", Page 5

### Cooking recommendations

The table shows which power level () is suitable for which food. The cooking time (⌚ min) may vary depending on the type, weight, thickness and quality of the food.

2. Turn the rotary knob until the required power level lights up on the display.


- ✓ The power level has been set.

**Note:** If no cookware is placed on the cooking zone or the pot is not suitable, the selected power level flashes. After a certain period of time, the cooking zone switches itself off.

### QuickStart


- ▶ If you place cookware on the hob before you switch it on, the cookware is detected when you switch on and the corresponding cooking zone is selected automatically. Select the power level in the next 20 seconds, or the hob switches itself off.

### Changing the power level and switching off the cooking zone


1. Select the cooking zone.
  2. Select the required power level or use the rotary knob to set it to .
- ✓ The cooking zone's power level changes or the cooking zone switches itself off and the residual heat indicator appears.

		⌚ min
<b>Melting</b>		
Chocolate coating	1 - 1.5	-
Butter, honey, gelatine	1 - 2	-
<b>Heating and keeping warm</b>		
Stew, e.g. lentil stew	1.5 - 2	-
Milk <sup>1</sup>	1.5 - 2.5	-
Boiled sausages <sup>1</sup>	3 - 4	-
<b>Defrosting and heating</b>		
Spinach, frozen	3 - 4	15 - 25
Goulash, frozen	3 - 4	35 - 55
<b>Poaching, simmering</b>		
Potato dumplings <sup>1</sup>	4.5 - 5.5	20 - 30
Fish <sup>1</sup>	4 - 5	10 - 15
White sauces, e.g. Béchamel sauce	1 - 2	3 - 6
Whisked sauces, e.g. Béarnaise sauce, Hollandaise sauce	3 - 4	8 - 12
<b>Boiling, steaming, braising</b>		
Rice, with double the volume of water	2.5 - 3.5	15 - 30
Rice pudding	2 - 3	30 - 40
Unpeeled boiled pots	4.5 - 5.5	25 - 35
Boiled potatoes	4.5 - 5.5	15 - 30

<sup>1</sup> Without lid

		⌚ min
Pasta <sup>1</sup>	6 - 7	6 - 10
Stew	3.5 - 4.5	120 - 180
Soups	3.5 - 4.5	15 - 60
Vegetables	2.5 - 3.5	10 - 20
Vegetables, frozen	3.5 - 4.5	7 - 20
Stew in a pressure cooker	4.5 - 5.5	-
<b>Stewing</b>		
Rolled roasting joint	4 - 5	50 - 65
Pot roast	4 - 5	60 - 100
Goulash	3 - 4	50 - 60
<b>Braising/frying with a small amount of fat <sup>1</sup></b>		
Escalope, plain or breaded	6 - 7	6 - 10
Escalope, frozen	6 - 7	6 - 12
Chops, plain or breaded	6 - 7	8 - 12
Steak (3 cm thick)	7 - 8	8 - 12
Poultry breast (2 cm thick)	5 - 6	10 - 20
Poultry breast, frozen	5 - 6	10 - 30
Rissoles (3 cm thick)	4.5 - 5.5	20 - 30
Hamburgers (2 cm thick)	6 - 7	10 - 20
Fish and fish fillet, plain	5 - 6	8 - 20
Fish and fish fillet, breaded	6 - 7	8 - 20

<sup>1</sup> Without lid

		⌚ min
Fish, breaded and frozen, e.g. fish fingers	6 - 7	8 - 15
Prawns and scampi	7 - 8	4 - 10
Sautéing fresh vegetables and mushrooms	7 - 8	10 - 20
Stir-fry, vegetables, meat cut in strips Asian-style	7 - 8	15 - 20
Frozen dishes, e.g. stir-fries	6 - 7	6 - 10
Pancakes, cooked one after the other	6.5 - 7.5	-
Omelette (cooked one after the other)	3.5 - 4.5	3 - 10
Fried eggs	5 - 6	3 - 6
<b>Deep-frying, 150–200 g per portion in 1–2 l oil, deep-fat fried in portions <sup>1</sup></b>		
Frozen products, e.g. chips, chicken nuggets	8 - 9	-
Croquettes, frozen	7 - 8	-
Meat, e.g. chicken portions	6 - 7	-
Fish, breaded or battered	6 - 7	-
Vegetables, mushrooms, breaded, beer-battered or tempura	6 - 7	-
Small baked items, e.g. doughnuts, battered fruit	4 - 5	-

<sup>1</sup> Without lid

## 9 Flex Zone

The flexible cooking zone allows you to position cookware of any shape or size any way you like. It consists of four inductors that work independently of each other. When the flexible cooking zone is in use, only the area that is covered by cookware is activated.

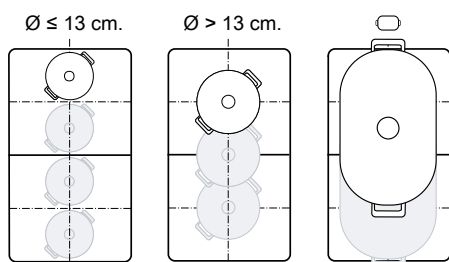
### 9.1 Positioning the cookware


The flexible cooking zone can be configured in two ways, depending on which cookware is used. In order to guarantee good thermal detection and heat distribution, we recommend positioning the cookware in the centre, as shown in the figures.

 
#### As a connected cooking zone

Recommended for cooking with just one item of cookware.

- Position the cookware depending on the size:



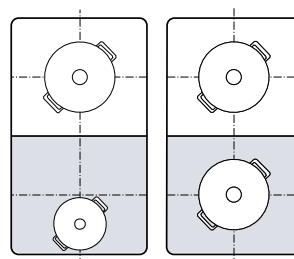
- Recommended oblong cookware :



#### As two separate cooking zones

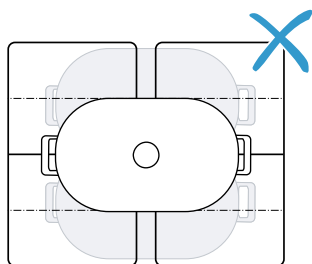
Recommended for cooking with two items of cookware.

You can use the front and rear zone independently of one another, and set a separate power level for each zone.




### Caution

Do not place cookware in the middle between the right and left zones. The cooking zones are not activated correctly and you do not achieve a good cooking result.




## 9.2 Flex Zone connect

By default, the flexible zone is configured as two separate cooking zones. Switch on the following function to connect the cooking zones:

1. Select one of the two cooking zones.
2. Press .
- ✓ The display lights up. The zone is connected.

**Note:** If you move or lift the cookware from an active connected cooking zone, an automatic search starts. Each item of cookware that is found within the cooking zone during this search is heated at the previously selected power level.

## 9.3 Flex Zone disconnecting

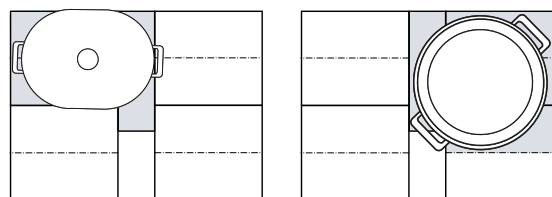
- ▶ Touch .
- ✓ The cooking zones are separated and work independently of each other.

# 10 FlexPlus Zone

 
With the extended cooking zone, you can cook with larger cookware or position long cookware sideways on. The extension always switches on in conjunction with one of the two flexible cooking zones. You cannot switch the extension on separately.

## 10.1 Position the cookware according to weight and size

Position the cookware in the middle over the rear part of the flexible cooking zone and its extension. Depending on the size of the cookware and the covered cooking surface, you can switch on the flexible cooking zone as two separate cooking zones or as one connected cooking zone:




## 10.2 Activating FlexPlus Zone

1. Place the cookware on the flexible cooking zone so that it covers the extension.
2. Select the cooking zone and the power level. The displays for the cooking zone and  for the extended zone light up.
- ✓ The zone is activated.

**Note:** If the display does not light up, lift the cookware and place it back on the cooking zone.

## 10.3 Deactivating FlexPlus Zone

- ▶ Select the cooking zone, use the button to select the cooking zone and set it to  using the TwistPad.
- ✓ The function has been deactivated.

# 11 Time-setting options

Your hob has various functions for setting the cooking time:



- Switch-off timer
- Timer
- Runtime

## 11.1 Switch-off timer

Allows you to program a cooking time for one or more cooking zones. Once the time has elapsed, the cooking zone is automatically switched off.

### Switching on Switch-off timer

 
1. Select the cooking zone and the power level.

2. Touch .
- ✓  lights up in the cooking zone.
3. Use the rotary knob to select the cooking time.
- ✓ The cooking time begins to count down.
- ✓ Once the cooking time has elapsed, the cooking zone is switched off and a signal tone sounds.

**Note:** When you set a cooking time for a cooking zone in which the Frying Sensor is activated, the cooking time will not start counting down until the selected temperature level has been reached.

### Changing or switching off Switch-off timer



1. Select the cooking zone and then touch .

2. Use TwistPad to change the cooking time or set it to  to delete the cooking time.




## 11.2 Timer

Enables the activation of a timer of 0–99 minutes. This function can be used independently of the cooking zones and other settings. It does not automatically switch off the cooking zones.


### Switching on Timer

1. Touch .
  2. Use the rotary knob to select the required time.
  3. Use  to confirm the setting.
- ✓ The time starts to elapse.
  - ✓ A signal tone sounds and the displays flash once the time has elapsed.


### Changing or switching off the Timer

1. Touch .
2. Change the running time using the rotary knob or set it to  to delete the running time.
3. Press  to confirm.

### Timer Plus

If you press  for a few seconds before the signal tone ends, the Runtime function is switched on. The display shows the time that has elapsed since the end of the


 
programmed time for the Timer function. The time that was previously set flashes Timer on the function display.

- ▶ Press and hold  for a few seconds.
- ✓ Runtime stops and the displays go out.
- ✓ The function is switched off.



 
## 11.3 Runtime

The stopwatch function displays the time that has elapsed since activation.

 
### Switching on Runtime

- ▶ Touch .
- ✓  light up.
- ✓ The time begins to count down.

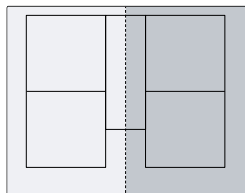
### Switching off Runtime

1. Touch .
- ✓ The function stops. The displays continue to light up.
2. If you touch  again while it is still orange, the time continues to elapse.
3. If you press and hold , the displays go out.
- ✓ The function is deactivated.



# 12 Booster for pots

You can use this function to heat up large volumes of water more quickly than with .

This function is available for all cooking zones, provided the other cooking zone in the same group is not in use.

 
 



## 12.1 Switching on Booster for pots

1. Select the cooking zone.
  2. Touch . The  display lights up.
- ✓ The function is switched on.

 
**Note:** You can also switch on this function when cooking with a connected FlexZone.

## 12.2 Switching off Booster for pots

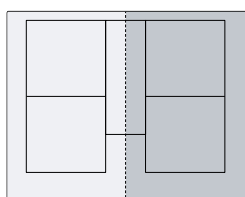
1. Select the cooking zone.
  2. Touch . The  display goes out and the cooking zone switches back to the  power level.
- ✓ The function has been deactivated.

**Note:** In certain circumstances, this function may switch itself off automatically in order to protect the electronic elements inside the hob.

# 13 Booster for pans

You can use this function to heat up pans more quickly than with .



This function is available for all cooking zones, provided the other cooking zone in the same group is not in use.



## 13.1 Recommended applications

- Do not place a lid on the pan.
- Never leave pans unattended when they are heating up.
- Only use cold pans.
- Use pans with a completely flat base. Do not use pans with a thin base.

 
 
 
## 13.2 Switching on Booster for pans

1. Select the cooking zone.
  2. Touch . The  display lights up.
- ✓ The function is switched on.

**Note:** You can also switch on this function when cooking with a connected FlexZone.

### 13.3 Switching off Booster for pans

1. Select the cooking zone.


2. Touch . The  display goes out and the cooking zone switches back to the  power level.
- ✓ The function has been deactivated.

**Note:** To avoid high temperatures, this function automatically switches itself off after 30 seconds.

 
## 14 Keep-warm function

You can use this function to melt chocolate or butter and to keep meals warm.

### 14.1 Switching on Keep-warm function

1. Select the required cooking zone.
2. Touch  within the next 10 seconds.
- ✓ The function is switched on.

### 14.2 Switching off Keep-warm function

1. Select the cooking zone.
2. Touch .
- ✓ The function has been deactivated.

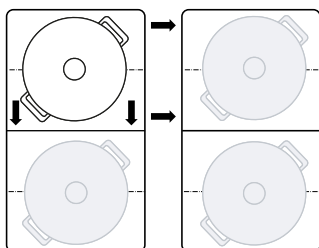
## 15 Transfer settings

You can use this function to transfer the power level and the programmed cooking time from one cooking zone to another.


### 15.1 Transfer settings

 
**Requirement:** Move the cookware to a cooking zone which is not switched on, which you have not yet pre-set and on which no other cookware has been previously placed.

1. Move the cookware within 90 seconds.



The cookware is detected and the previously selected power level flashes on the display for the new cooking zone.

 lights up.


2. In order to implement the settings, use the rotary knob to select the new cooking zone. The appliance sets the power level for the original cooking zone to .
- ✓ The settings are transferred to the new cooking zone.


**Note:** If you place a new item of cookware on a different cooking zone before you have confirmed the settings, you can use this function for both items of cookware.

## 16 Professional cooking function

You can use this function to set a preset power level for each cooking zone. Set down a suitable item of cookware within 9.5 minutes to apply the default value.

### 16.1 Activating the professional cooking function

1. Switch on the hob.
2. Press .
- ✓ The preset power levels light up on the cooking zone displays.

3. Set down a suitable item of cookware within 8 minutes. Once the cookware is detected, the corresponding cooking zone is selected. You can adjust the power level using the rotary knob.
- ✓ The power level displays for the unoccupied cooking zones start flashing if the adjustment time has elapsed.
4. Touch the  symbol again within 90 seconds to extend the professional cooking function. If you do not touch the symbol, the unused cooking zones are switched off.

#### Notes


 
- You can also set the keep-warm function in professional cooking mode.

- If you set down unsuitable cookware, e.g. aluminium cookware, the power level display flashes until you remove the cookware. Check the section "Checking the cookware" to see whether your cookware is suitable for induction cooking. → Page 17


## 16.2 Switching off the professional cooking function




 
You can switch off the function in two ways:

### Switching off immediately

- ▶ Press .
- ✓ All cooking zones switch to the power .
- ✓ The symbol lights up white.

### Automatic switch-off

The function ends automatically: If, after 8 minutes, no suitable cookware has been set down on one or more cooking zones,  and the corresponding cooking zone displays start flashing for 90 seconds.


- ▶ To switch off the function, press  twice.  
If you do not touch , the professional cooking function switches off automatically after 90 seconds.
- ✓  lights up white and the cooking zones without cookware switch to power level .
- ✓ The cooking zones remain in operation at the set power level.

## 16.3 Changing settings

- ▶ You can change the default settings in the "Basic settings" menu → Page 16.

# 17 Frying Sensor

Suitable for cooking or reducing sauces, pancakes or frying eggs with butter, for frying vegetables or steaks up to the required level of boiling, and for keeping the temperature under control.






Instead of frequently adjusting the power level during cooking, select the required target temperature once at the start. The sensors under the glass ceramic measure the temperature of the cookware and keep this constant throughout the entire cooking process. This function is available on all cooking zones marked with this symbol .

## 17.1 Advantages

- The temperature is automatically kept constant without you having to change the power level.
- Oil does not overheat. This prevents the food from burning.
- The cooking zone only continues heating for as long as this is necessary to maintain the temperature. This saves energy.



## 17.2 Temperature levels

Temperature levels for preparing meals.

Level	Temperature	Functions	Cookware
1	120 °C	Boiling and reducing sauces, fry vegetables	
2	140 °C	Searing in olive oil or butter	
3	160 °C	Frying fish and coarse foods	
4	180 °C	Deep-fat frying breaded, frozen and grilled food	
5	215 °C	High-temperature grill and griddle plate	

## 17.3 Recommended cookware



 
 
Special cookware has been developed for this function, which delivers the best results.

Cookware	Recommended cooking zone
Frying pan, 15 cm diameter	Single cooking zone
Frying pan, 19 cm diameter	Single cooking zone
Frying pan, 21 cm diameter	Single cooking zone
Frying pan, 28 cm diameter	Extended FlexZone
Teppanyaki 	Flex Zone
Grill 	Flex Zone

The recommended cookware is available from customer service, specialist retailers or our online shop [www.gaggenau.com](http://www.gaggenau.com).


**Note:** You can also use other cookware. Depending on the composition of the cookware, the achieved temperature may differ from the selected temperature level.

## 17.4 Switching on the Frying Sensor

 

1. Place the empty cookware on the cooking zone.
2. Select the cooking zone and touch .
  - ✓  lights up on the cooking zone display.
  - ✓ The **Hi** temperature setting is displayed.
3. Within the next 10 seconds, use the rotary knob to select the required temperature setting.
  - ✓ The display for the cooking zones shows the progress of heating up a cooking zone from  to  and flashes alternately with the selected temperature.
  - ✓ Once the set temperature setting has been reached, a signal tone sounds and the heating indicator goes out. The temperature setting is displayed.
4. Add the frying fat and then the food to the frying pan.

**Note:** If you need to cook with more than 250 ml oil, add the oil and wait a few seconds before you add the food.

































 



 






















## 17.5 Switching off Frying Sensor




 


 













 


 
 











 
 
 


 




 
 


- ▶ Select the cooking zone and touch .
- ✓ The function has been deactivated.

## 17.6 Recommendations for cooking with the Frying Sensor

The following table shows the ideal temperature levels for a selection of dishes. The temperature  and the cooking time  min depend on the amount, condition and quality of the food.

-  Frying pan
-  Teppanyaki
-  Griddle plate

	Cookware		 min
<b>Meat</b>			
Escalope	  	4	6-10
Escalope, breaded		4	6-10
Fillet	  	4	6-10
Chops	  	3	10-15
Cordon bleu, Wiener Schnitzel		4	10-15
Steak, rare, 3 cm thick	  	5	6-8
Steak, medium, 3 cm thick	  	5	8-12
Steak, well-done, 3 cm thick	  	4	8-12
T-bone steak, rare, 4.5 cm thick	  	5	10-15
T-bone steak, medium, 4.5 cm thick	  	5	20-30
Poultry breast, 2 cm thick	  	3	10-20
Bacon	  	2	5-8
Minced meat		4	6-10
Hamburgers, 1.5 cm thick	  	3	6-15
Meatballs, 2 cm thick		3	10-20
Sausages	  	3	8-20
Chorizo, fresh sausages	  	3	10-20
Skewers, kebabs	  	3	10-20
Gyros		4	7-12
<b>Fish and seafood</b>			
Fish fillet	  	4	10-20
Fish fillet, breaded		4	10-20
Fish, fried, whole	  	3	10-20
Sardines	  	4	6-12


	Cookware		 min
Scampi, prawns	  	4	4-8
Squid, cuttlefish	  	4	6-12
<b>Egg dishes</b>			
Fried eggs in butter		2	2-6
Fried eggs		4	2-6
Scrambled eggs		2	4-9
Omelette		2	3-6
French toast		3	4-8
Crêpes, blinis, pancakes, tacos		5	1-3
<b>Vegetables</b>			
Roast potatoes		5	6-12
Chips		4	15-25
Potato pancakes		5	2-4
Onions, roasted garlic		2	2-10
Onion rings		3	5-10
Courgettes, aubergines, peppers	  	2	4-12
Green asparagus	  	3	4-15
Mushrooms	  	4	10-15
Vegetables, braised in oil		1	10-20
Vegetables in tempura batter		4	5-10
<b>Frozen products</b>			
Chicken nuggets		4	10-15
Fish fingers		4	8-12
Chips		5	4-8
Stir-fries		3	6-10
Spring rolls		4	10-30
Pastries, croquettes		5	3-8
<b>Sauces</b>			
Tomato sauce		1	25-35
Béchamel sauce		1	10-20
Cheese sauce		1	10-20
Sweet sauces		1	15-25
Sauces, reduced		1	25-35
<b>Other</b>			
Fried cheese		3	7-10
Croutons		3	6-10
Toasted bread	  	4	4-8
Dried ready meals		1	5-10
Almonds, walnuts, pine nuts, roasted	 	4	3-15
Popcorn		5	3-4

## 18 Childproof lock

The hob is equipped with a childproof lock. This prevents children from switching on the hob.

### 18.1 Switching on Childproof lock

**Requirement:** The hob must be switched off.

- ▶ When you remove the rotary knob,  lights up for 10 seconds.
- ✓ A signal tone sounds.
- ✓ The hob is locked.

### 18.2 Switching off Childproof lock


- ▶ Fit the rotary knob.
- ✓ The lock is released.

**Note:** When the hob is switched on and you remove the rotary knob, the Wipe protection function is switched on. If you do not use the rotary knob within 10 minutes, the hob is switched off and the Childproof lock function is switched on.

## 19 Wipe protection

Allows the control panel to be locked for cleaning so that the settings are not inadvertently adjusted. The lock has no effect on the main switch.

### 19.1 Switching on Wipe protection

- ▶ Remove the rotary knob.  lights up.
  - The cooking process continues.
- ✓ The control panel is locked for 10 minutes.

### 19.2 Switching off Wipe protection

To switch off the function early:

- ▶ Fit the rotary knob.
- ✓ The control panel is unlocked. The cooking processes continue.

## 20 Individual safety switch-off

 
 
The safety function is activated if one cooking zone is in operation for an extended period and you do not change any settings. The cooking zone displays *FB* and switches itself off. The time from 1 to 10 hours depends on the selected power level.

Press any button to switch on the cooking zone.

## 21 Basic settings

You can configure the basic settings for your appliance to meet your needs.

### 21.1 Overview of the basic settings

Display	Setting	Value
 <i>i</i>	Signal tones	<i>ON</i> – All signal tones are switched on <sup>1</sup> . <i>OFF</i> – Most of the signals are switched off.
 <i>2</i>	Time for selecting the cooking zone	<i>5</i> – The cooking zone remains selected for 5 seconds.* <i>10</i> – The cooking zone remains selected for 10 seconds. <sup>1</sup> <i>15</i> – The cooking zone remains selected for 15 seconds. <i>OFF</i> – Unlimited: The cooking zone that was last set remains selected.

<sup>1</sup> Factory setting

<sup>2</sup> The function is not available in this model.

Display	Setting	Value
$\varepsilon$ 3	Power limitation Enables the total power of the hob to be limited, if necessary, based on the conditions of your electrical installation. The available settings depend on the maximum power of the hob (see rating plate). If the function is active and the hob has reached the set power limit, $\_$ is displayed and you cannot select a higher power level.	0 – Switched off. Maximum power of the hob <sup>1</sup> . 1 – 1000 W. Lowest power setting. 1.5 – 1500 W. ... 3 – 3000 W. Recommended for 13 A 3.5 – 3500 W. Recommended for 16 A. 4 – 4000 W. 4.5 – 4500 W. Recommended for 20 A. ... 9 – Maximum power of the hob.
$\varepsilon$ 4	Restoring the factory settings	OFF – Individual settings. <sup>1</sup> ON – Factory settings.
$\varepsilon$ 5	Wireless cooking sensor <sup>2</sup> Connect the wireless cooking sensor to the cooking zone. Select the setting in accordance with the height about sea level:	1-2 – Decrease. 3 – Basic setting. 4-9 – Increase.
$\varepsilon$ 6	Professional cooking function	Select a single cooking zone in order to preset the power level for the professional cooking function.
$\varepsilon$ 7	Cookware test You can use this function to test the quality of the cookware.	0 – Not suitable. 1 – Not optimal. 2 – Suitable.
$\varepsilon$ 9	Home Connect	→ "Overview of the Home Connect settings", Page 19

<sup>1</sup> Factory setting<sup>2</sup> The function is not available in this model.

## 21.2 To go to the basic settings

**Requirement:** The hob must be switched off.

1. To switch on the hob, touch ①.
2. Press  $\mathcal{E}$  within the next 10 seconds.

Product information	Display
Directory for the technical after-sales service (TK)	0 1
Production number	Fd
Production number 1	02.
Production number 2	0.5

- ✓ The first four displays provide the product information. To call up each individual display, turn the rotary knob.

3. Touch  $\mathcal{E}$  to access the basic settings.  
✓  $\varepsilon$  1 and ON light up as a presetting.
4. Touch  $\mathcal{E}$  repeatedly until the desired setting appears.
5. Use the rotary knob to change the desired setting.
6. Touch and hold  $\mathcal{E}$  for 4 seconds.  
✓ The settings are saved.

## 21.3 Discarding changes to the basic settings

- Touch ①.
- ✓ All changes are discarded and not saved.

# 22 Cookware test

The quality of the cookware has a major influence on the speed and the result of the cooking process. You can use this function to test the quality of the cookware.

Before the test, ensure that the size of the cookware base corresponds to the size of the cooking zone being used.

Access is via the basic settings. → Page 16

## 22.1 Carrying out Cookware test


As a single cooking zone, the flexible cooking zone is set in such a way that only the individual item of cookware is checked.

 

1. At room temperature, place the cookware with approx. 200 ml water in the centre of the cooking zone that best fits the base of the cookware in terms of size.
2. Call up the basic settings and select  $\varepsilon$  7.
3. Turn the rotary knob. — flashes in the cooking zones.  
✓ The function is switched on.  
✓ After 10 seconds, the result appears in the cooking zone displays.

## 22.2 Checking the result

You can see what the result means for the quality and speed of the cooking process in the following table.

### Result

- |  |   |
|--|---|
|  | The cookware is not suitable for the cooking zone and therefore does not heat up. |
|--|---|

- |   |   |
|---|---|
|  | The cookware is taking longer to heat up than expected and cooking is not progressing as well as it ought to. |
|  | The cookware is heating up correctly and cooking is progressing well.   |

To switch the function on again, turn the rotary knob.

## 23 Power limitation

You can use this function to set the total power of the hob.

The hob is set at the factory. You can find the maximum power of the hob on the rating plate. You can use this function to adjust the configuration to the requirements of each electrical installation.

To ensure that this set value is not exceeded, the hob automatically distributes the available power as needed between the cooking zones that are switched on.

While this function is activated, the output of each cooking zone may temporarily fall below the nominal value. In order to not exceed this set value, the hob automatically distributes the available power as needed between the cooking zones that are switched on. The appliance regulates and selects the highest power level automatically.

You can find out how to do this in the "Basic settings" section → *Page 16*

## 24 Home Connect

This appliance is network-capable. Connecting your appliance to a mobile device lets you control its functions via the Home Connect app, adjust its basic settings and monitor its operating status.

The Home Connect services are not available in every country. The availability of the Home Connect function depends on the availability of Home Connect services in your country. You can find information about this at: [www.home-connect.com](http://www.home-connect.com).

The Home Connect app guides you through the entire login process. Follow the instructions in the Home Connect app to configure the settings.

### Tips

- Please consult the documents supplied by Home Connect.
- Please also follow the instructions in the Home Connect app.

### Notes

- Please note the safety precautions in this instruction manual and make sure that they are also observed when operating the appliance via the Home Connect app.  
→ "Safety", *Page 2*
- Hobs are not designed to be left unattended. Always monitor the cooking process.
- Operating the appliance on the appliance itself always takes priority. During this time it is not possible to operate the appliance using the Home Connect app.
- In networked standby mode, the appliance requires a maximum of 2 W.

### 24.1 Setting up Home Connect

#### Requirements

- The appliance is connected to the power supply and is switched on.
  - You have a mobile device with a current version of the iOS or Android operating system, e.g. a smartphone.
  - The mobile device and the appliance are within range of your home network's Wi-Fi signal.
1. Download the Home Connect app.



2. Open the Home Connect app and scan the following QR code.



3. Follow the instructions in the Home Connect app.

## 24.2 Overview of the Home Connect settings

You can adjust the settings and network settings for Home Connect by going to your hob's basic settings.


Setting	Selection or display	Additional information
<i>H C 1/NET</i>	Network connection <i>OFF</i> – Not connected/disconnect network <i>001</i> – Connect automatically <i>002</i> – Connect manually <i>00</i> – Connected	Log on the hob in the Wi-Fi home network (Wi-Fi) or disconnect from the network.
<i>H C 2/PRI</i>	Connection to app <i>OFF</i> – Not connected <i>00</i> – Connect	<i>H C 2/PRI</i> is only displayed if the hob is connected to the home network.
<i>H C 3/CON</i>	Connection to the Wi-Fi <i>OFF</i> – Wireless module switched off <i>00</i> – Wireless module switched on	If Wi-Fi has been activated, you can use the Home Connect functions. <i>H C 3/CON</i> is only displayed if the hob has been previously connected to a network.
<i>H C 4/FES</i>	Set using the app <i>OFF</i> – Switched off <i>00</i> – Switched on <sup>1</sup>	If the setting is switched off, only the hob's operating statuses are displayed in the Home Connect app.
<i>H C 5/UPd</i>	Software update <i>DEF</i> – Update available and ready to install <i>INS</i> – Start installation	<i>H C 5/UPd</i> is only displayed if a software update is available.
<i>H C 6/FEd</i>	Controlling remote access by after-sales service <i>OFF</i> – Not authorised <i>00</i> – Authorised	<i>H C 6/FEd</i> is only displayed if after-sales service is attempting to connect to the hob. After granting access, you can terminate this at any time.
<i>H C 7/SEF</i>	Display Wi-Fi signal strength <i>NR</i> – Not connected to the WLAN home network (Wi-Fi) <i>1</i> – Signal strength 1 (poor) <i>2</i> – Signal strength 2 (moderate) <i>3</i> – Signal strength 3 (good)	<i>H C 7/SEF</i> is only displayed if there is a connection to the WLAN home network (Wi-Fi).
<i>H C 8/SEF</i>	Connection to Home Connect server <i>OFF</i> – Not connected <i>00</i> – Connected	<i>H C 8/SEF</i> is only displayed if there is a connection to the WLAN home network (Wi-Fi).

<sup>1</sup> Factory setting

## 24.3 Changing settings via the Home Connect app

You can use the Home Connect app to change the settings for the cooking zones and send them to the hob.

### Requirements

- The hob is connected to the Wi-Fi and to the Home Connect app.
  - To use the Home Connect app to set the hob, *H C 4* must be switched on in the basic settings. *H C 4* is switched on on delivery. If the option for the transmission of settings has been deactivated, only the hob's operating statuses are displayed in the Home Connect app.
1. Select the setting in the Home Connect app and send it to the hob.  
Follow the instructions in the Home Connect app. Settings that you send from the Home Connect app to the hob must be confirmed on the hob.
  - ✓ As soon as cooking settings are transmitted to a cooking zone, the cooking zone display starts to flash, depending on the setting.
  2. To confirm the setting, touch the flashing symbol .

3. To discard the setting, touch any other touch field on the hob.

## 24.4 Software update

Your appliance's software can be updated using the software update function, e.g. for the purposes of optimisation, troubleshooting or security updates. To do this, you must be a registered Home Connect user, have installed the app on your mobile device and be connected to the Home Connect server. As soon as a software update is available, you will be informed via the Home Connect app and will be able to start the software update via the app. Once the update has been successfully downloaded, you can start installing it via the Home Connect app if you are in your WLAN home network (Wi-Fi). The Home Connect app will inform you once installation is successful.

### Notes

- You can continue to use your appliance as normal while updates are downloading. Depending on your personal settings in the app, software updates can also be set to download automatically.

- We recommend that you install security updates as soon as possible.

## 24.5 Remote diagnostics

Customer Service can use Remote Diagnostics to access your appliance if you contact them, have your appliance connected to the Home Connect server and if Remote Diagnostics is available in the country in which you are using the appliance.

**Tip:** For further information and details about the availability of Remote Diagnostics in your country, please visit the service/support section of your local website: [www.home-connect.com](http://www.home-connect.com)

## 24.6 Data protection

Please see the information on data protection.

The first time your appliance is registered on a home network connected to the Internet, your appliance will transmit the following types of data to the Home Connect server (initial registration):

- Unique appliance identification (consisting of appliance codes as well as the MAC address of the Wi-Fi communication module installed).
- Security certificate of the Wi-Fi communication module (to ensure a secure data connection).
- The current software and hardware version of your appliance.
- Status of any previous reset to factory settings.

This initial registration prepares the Home Connect functions for use and is only required when you want to use the Home Connect functions for the first time.

**Note:** Please note that the Home Connect functions can only be utilised with the Home Connect app. Information on data protection can be retrieved in the Home Connect app.

# 25 Hob-based hood control

If both appliances are Home Connect-compatible, connect the appliances in the Home Connect app. To do this, connect the two appliances to Home Connect and follow the instructions in the app.



 
### Notes

- Using the controls on the extractor hood always takes priority. It is not possible to use the hob-based hood control during this time.
- In networked standby mode, the appliance requires a maximum of 2 W.
- You can only connect to the extractor hood via the Home Connect app. Other connection routes are no longer supported.

## 25.1 Resetting Home Connect settings

If you have problems connecting your appliance to the WLAN home network (Wi-Fi) or if you want to log your appliance onto a different WLAN home network (Wi-Fi), you can reset the Home Connect settings.

 
**Note:** If you reset the Home Connect settings, the connection to any extractor hood will also be terminated.

 
 
 
 
 
 
1. Switch on the hob.
2. To open the basic settings, press .
3. Press and hold  until the setting  appears on the display.
4. Use the twist knob to set the value **OFF**.
5. Exit the basic settings.

## 25.2 Controlling the extractor hood via the hob

 
You can change the behaviour of your extractor hood in the basic settings of your hob, depending on switch-on/off of the hob or individual cooking zones. You can select other settings using the controls on the hob.

### Setting the fan

1. Touch .
2. Use the twist knob to select a setting.  
You can select the following settings:

 
 
	Fan on
	Automatic mode
	Intensive settings: Low, medium, high
	PowerBoost
	Intermittent ventilation
	Fan run-on

### Switching off the fan

1. Touch .
2. Use the twist knob to select the fan setting 0.

### Setting the hood lighting

You can switch the hood lighting on and off using the control panel of the hob.

1. To switch the lighting on, touch .
2. To switch the lighting off, touch  again.

**Note:** Depending on the basic setting that is selected, the light switches on or off automatically when you switch the hob on or off.

## 25.3 Overview of the hood control settings

In the basic settings for your hob, you can adjust the behaviour of your extractor hood depending on whether the hob or individual cooking zones are switched on or off.

Setting	Selection	Description
<i>cE</i>	Connection between hob and extractor hood <i>OFF</i> – Not connected/disconnect <i>1</i> – Start connection process <i>2</i> – Connected to WLAN home network (Wi-Fi) <i>ON</i> – Connected to extractor hood	-
<i>cR</i>	Automatic fan start-up <i>OFF</i> – Switched off. The extractor hood must be switched on manually, if required. <i>R</i> – Switched on in automatic mode <sup>1</sup> . In automatic mode, the extractor hood switches itself on when one of the cooking zones is switched on. <i>1</i> – Switched on in manual mode. The extractor hood is switched on at the lowest setting when a cooking zone is switched on. <i>2</i> – Switched on in manual mode. The extractor hood is switched on at the medium setting when a cooking zone is switched on. <i>3</i> – Switched on in manual mode. The extractor hood is switched on at the highest setting when a cooking zone is switched on.	The display shows this setting only when the appliance has been connected to the extractor hood.
<i>cb</i>	Fan run-on <i>OFF</i> – Fan switches off when the hob is switched off. <i>R</i> – Switched on in automatic mode <sup>1</sup> <i>ON</i> – Switched on with standard fan run-on <i>NO</i> – No change to the settings	Setting for whether and how the fan is to run on after switching off the hob. The display shows this setting only when the appliance has been connected to the extractor hood.
<i>cc</i>	Switch light on automatically <i>OFF</i> – Switched off <sup>1</sup> <i>ON</i> – Switched on The light switches itself on when the hob is switched on.	The display shows this setting only when the appliance has been connected to the extractor hood.
<i>cd</i>	Switch light off automatically <i>OFF</i> – Switched off <sup>1</sup> <i>ON</i> – The light switches itself off when the hob is switched off.	The display shows this setting only when the appliance has been connected to the extractor hood.

<sup>1</sup> Factory setting (may vary according to model)

## 26 Cleaning and servicing

To keep your appliance working efficiently for a long time, it is important to clean and maintain it carefully.

### 26.1 Cleaning products

You can obtain suitable cleaning products and glass scrapers from customer service, a retailer or the online shop [www.gaggenau.com](http://www.gaggenau.com).

#### ATTENTION!

Unsuitable cleaning products may damage the surfaces of the appliance.

- ▶ Never use unsuitable cleaning products.
- ▶ Do not use cleaning products while the hob is still hot. This may cause marks on the surface.

#### Unsuitable cleaning products

- Undiluted detergent
- Detergent intended for dishwashers

- Abrasive cleaning products
- Aggressive cleaning products such as oven spray or stain remover
- Abrasive sponges
- High-pressure or steam jet cleaners

### 26.2 Cleaning the hob

Clean the hob after every use to stop cooking residues from getting burnt on.

**Requirement:** The hob must be cold. Do not allow the hob to cool down if it has sugar stains, plastic or aluminium foil on it.

1. Remove heavy soiling using a glass scraper.
2. Clean the hob with a cleaning agent for glass ceramic.  
Follow the cleaning instructions on the packaging of the cleaning agent.

**Tip:** You can achieve good cleaning results using a special sponge for glass ceramic.

## 26.3 Cleaning the hob surround

If the hob frame is dirty or stained after use, clean this.

**Note:** Do not use a glass scraper.

1. Clean the hob frame with hot soapy water and a soft cloth.

2. Wash new sponge cloths thoroughly before use.  
Dry with a soft cloth.

## 26.4 Cleaning TwistPad

To clean the twist knob, use lukewarm water with a little washing-up liquid.

Do not use abrasive or corrosive cleaning agents. Do not clean it in the dishwasher or immerse it in water, as this may damage it.

# 27 FAQs

## 27.1 Using the appliance

Question	Answer
Why can I not switch on the hob and why is the childproof lock symbol lit?	<ul style="list-style-type: none"> <li>■ The childproof lock is activated. You can find further information about this function under → <i>"Childproof lock"</i>, Page 16.</li> </ul>
Why are the illuminated displays flashing and why is a signal sounding?	<ul style="list-style-type: none"> <li>■ Clean the surface of the control panel of any liquids or food residue. Remove any objects that may cover the control panel. You can find further information about deactivating the signal tone under → <i>"Basic settings"</i>, Page 16.</li> </ul>
Why can I not activate the frying sensor?	<ul style="list-style-type: none"> <li>■ The appliance has reached its maximum power consumption or the power manager function has been activated. Switch off or reduce the power levels of the active cooking zones. You can find further information about this function under → <i>"Power limitation"</i>, Page 18.</li> </ul>

## 27.2 Noises

Question	Answer
Why can I hear noises while I'm cooking?	<ul style="list-style-type: none"> <li>■ Noises may be generated while using the hob depending on the base material of the cookware. These noises are normal for induction technology. They do not indicate that there is a fault.</li> </ul>
Possible noises	<ul style="list-style-type: none"> <li>■ <b>A deep humming noise similar to a transformer:</b> Occurs when cooking at a high power level. This noise disappears or becomes quieter when you reduce the power level.</li> <li>■ <b>A quiet whistling noise:</b> This can be heard when the cookware is empty. This noise disappears when you add water or food to the cookware.</li> <li>■ <b>Crackling:</b> This noise occurs when the cookware is made from different multilayer materials, or if you use cookware of different sizes and different materials. The loudness of the noise can vary depending on the quantity of food being cooked or the cooking method.</li> <li>■ <b>Loud whistling noises:</b> These may arise if you are operating two cooking zones at the same time and at the maximum power level. These whistling noises disappear or become quieter when you reduce the power level.</li> <li>■ <b>Fan noises:</b> The hob is equipped with a fan that switches on automatically at high temperatures. The fan may also continue to run after you have switched the hob off if the temperature measured is still too high.</li> </ul>

## 27.3 Cookware

Question	Answer
Which cookware is suitable for the induction hob?	<ul style="list-style-type: none"> <li>■ You can find additional information on which items of cookware are suitable for the induction cooking under → <i>"Suitable cookware"</i>, Page 5.</li> </ul>

Question	Answer
Why is the cooking zone not heating up and why is the heat setting flashing?	<ul style="list-style-type: none"> <li>■ The cookware is too small for the cooking zone that is switched on or it is not suitable for induction cooking. Ensure that the cookware is suitable for induction cooking and that it is placed on the cooking zone which best corresponds to its size. You can find more information about this under → "Suitable cookware", Page 5 → "Flex Zone", Page 10.</li> <li>■ The cookware is on a different cooking zone to the one that has been switched on. Ensure that you have switched on the correct cooking zone for the cookware.</li> </ul>
Why is it taking so long for the cookware to heat up or why is it not heating up sufficiently despite being on a high power setting?	<ul style="list-style-type: none"> <li>■ The cookware is too small for the cooking zone that is switched on or it is not suitable for induction cooking. Ensure that the cookware is suitable for induction cooking and that it is placed on the cooking zone which best corresponds to its size. You can find more information about this under → "Suitable cookware", Page 5 → "Flex Zone", Page 10.</li> </ul>

## 27.4 Cleaning

Question	Answer
How can I clean the hob?	<ul style="list-style-type: none"> <li>■ You can achieve the best results by using special glass-ceramic cleaning products. Do not use harsh or abrasive cleaning products, dishwasher detergent (concentrated) or scouring pads. You can find more information about this under → "Cleaning and servicing", Page 21.</li> </ul>

# 28 Troubleshooting

You can rectify minor faults on your appliance yourself. Read the troubleshooting information before contacting after-sales service. This will avoid unnecessary costs.

### **WARNING – Risk of injury!**

Improper repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ If the appliance is defective, call Customer Service.

### **WARNING – Risk of electric shock!**

Incorrect repairs are dangerous.

- ▶ Repairs to the appliance should only be carried out by trained specialist staff.
- ▶ Only use genuine spare parts when repairing the appliance.
- ▶ If the power cord of this appliance is damaged, it must be replaced with a special connection cable, which is available from the manufacturer or his Customer Service.

## 28.1 Warnings

### Notes

- If  $E$  appears in the displays, press and hold the sensor for the respective cooking zone and read the fault code.
- If the fault code is not listed in the table, disconnect the hob from the power supply and wait 30 seconds before reconnecting it. If this display appears again, contact the technical after-sales service and specify the exact fault code.
- If an error occurs, the appliance does not switch to standby mode.
- In order to protect the appliance's electronic parts from overheating or surge currents, the hob may temporarily reduce the power level.

## 28.2 Information on the display panel

Fault	Cause and troubleshooting
No displays light up.	<p>The power supply has been disconnected.</p> <ul style="list-style-type: none"> <li>▶ Use other electrical appliances to check whether there has been a power failure.</li> </ul> <p>The appliance has not been connected as shown in the circuit diagram.</p> <ul style="list-style-type: none"> <li>▶ Connect the appliance in accordance with the circuit diagram.</li> </ul>

<b>Fault</b>	<b>Cause and troubleshooting</b>
No displays light up.	Electronics fault ► If you are unable to rectify the fault, inform the technical after-sales service.
The displays flash.	The control panel is wet or an object is covering it. ► Dry the control panel or remove the object.
<i>F2, F4, E 7015, E 8207, E 8208</i>	The electronics have overheated and one or all of the cooking zones have been switched off. ► Wait until the electronics have cooled down sufficiently. Then touch any button on the control panel.
<i>F5</i> + power level and audible signal	There is hot cookware in the vicinity of the control panel. This may cause the electronics to overheat. ► Remove the cookware. The fault display goes out shortly afterwards. You can continue to cook.
<i>F5</i> and signal tone	There is hot cookware in the vicinity of the control panel. The cooking zone has been switched off to protect the electronics. ► Remove the cookware. Wait a few seconds. Touch any button. When the fault display goes out, you can continue cooking.
<i>F1/F6</i>	The cooking zone has overheated and has been switched off to protect the work surface. ► Wait until the electronics have cooled down sufficiently before switching the cooking zone back on.
<i>F0</i>	Transfer settings does not switch on. ► Touch any button to confirm the fault display. You can continue to cook as normal without using the Transfer settings function. Contact customer service.
<i>F9</i>	FlexPlus Zone does not switch on. ► Touch any sensor to confirm the fault display. You can use the remaining cooking zones to continue cooking. Contact the technical after-sales service.
<i>F8</i>	The cooking zone has been operating continuously for an extended period. ► Individual safety switch-off is switched on. Touch any button to switch off the display so that you can set the cooking zone again.
<i>E 9000/E9010</i>	The operating voltage is incorrect and outside of the normal operating range. ► Contact your energy supplier.
<i>U400</i>	The hob is not connected correctly. ► Disconnect the hob from the mains. Connect the hob in accordance with the circuit diagram.
<i>dE</i>	Demo mode is activated. ► Disconnect the hob from the mains. Wait for 30 seconds and connect the hob. Touch any sensor in the next three minutes. Demo mode is deactivated.

## 28.3 Normal noises from your appliance

An induction hob may sometimes cause noises or vibrations, such as buzzing, crackling, hissing noises, fan noises or rhythmic noises.

# 29 Disposal

## 29.1 Disposing of old appliance

Valuable raw materials can be reused by recycling.

1. Unplug the appliance from the mains.
2. Cut through the power cord.
3. Dispose of the appliance in an environmentally friendly manner.  
Information about current disposal methods are available from your specialist dealer or local authority.



This appliance is labelled in accordance with European Directive 2012/19/EU concerning used electrical and electronic appliances (waste electrical and electronic equipment - WEEE).  
The guideline determines the framework for the return and recycling of used appliances as applicable throughout the EU.

## 29.2 Disposing of batteries

Batteries should be recycled in an environmentally friendly manner. Do not dispose of the batteries in the household rubbish.

- Dispose of batteries in an environmentally friendly manner.



According to the European Guideline 2006/66/EC, defective or used battery packs/batteries, must be collected separately and disposed of in an environmentally correct manner.

## 30 Declaration of Conformity

BSH Hausgeräte GmbH hereby declares that the appliance with Home Connect functionality conforms to the basic requirements and other relevant provisions of Directive 2014/53/EU.

A detailed RED Declaration of Conformity can be found online at [www.gaggenau.com](http://www.gaggenau.com) among the additional documents on the product page for your appliance.



Hereby, BSH Hausgeräte GmbH declares that the appliance with Home Connect functionality is in compliance with relevant statutory requirements.<sup>1</sup>

A detailed Declaration of Conformity can be found online at [www.gaggenau.com/gb](http://www.gaggenau.com/gb) among the additional documents on the product page for your appliance.<sup>1</sup>



Only applies to Great Britain

2.4 GHz band (2400–2483.5 MHz): Max. 100 mW

5 GHz band (5150–5350 MHz + 5470–5725 MHz):

Max. 100 mW



BE	BG	CZ	DK	DE	EE	IE	EL	ES
FR	HR	IT	CY	LI	LV	LT	LU	HU
MT	NL	AT	PL	PT	RO	SI	SK	FI
SE	NO	CH	TR	IS	UK (NI)			

5 GHz WLAN (Wi-Fi): For indoor use only.

AL	BA	MD	ME	MK	RS	UK	UA
----	----	----	----	----	----	----	----

5 GHz WLAN (Wi-Fi): For indoor use only.

## 31 Customer Service

Function-relevant genuine spare parts according to the corresponding Ecodesign Order can be obtained from Customer Service for a period of at least 10 years from the date on which your appliance was placed on the market within the European Economic Area.

**Note:** Under the terms of the manufacturer's warranty the use of Customer Service is free of charge.

Detailed information on the warranty period and terms of warranty in your country is available from our after-sales service, your retailer or on our website.

If you contact Customer Service, you will require the product number (E-Nr.) and the production number (FD) of your appliance.

The contact details for Customer Service can be found in the enclosed Customer Service directory or on our website.

### 31.1 Product number (E-Nr.) and production number (FD)

You can find the product number (E-Nr.) and the production number (FD) on the appliance's rating plate.

The rating plate can be found:

- on the appliance certificate.
- on the lower section of the hob.

The product number (E no.) can also be found on the glass ceramic. You can also display the customer service index (KI) and the production number (FD) in the basic settings. → *Page 16*

Make a note of your appliance's details and the Customer Service telephone number to find them again quickly.

<sup>1</sup> Only applies to Great Britain



A series of horizontal lines for writing, starting from the top right of the page and extending downwards to the bottom of the page.



A series of horizontal lines for writing, starting from the top right of the page and extending downwards to the bottom of the page.

**BSH Hausgeräte GmbH**  
Carl-Wery-Straße 34  
81739 München, GERMANY  
[www.gaggenau.com](http://www.gaggenau.com)

Valid within Great Britain:  
Imported to Great Britain by  
BSH Home Appliances Ltd.  
Grand Union House  
Old Wolverton Road  
Wolverton, Milton Keynes  
MK12 5PT  
United Kingdom

**GAGGENAU**



9001741819 en (021028)